

User Manual

DC²Meter



Rackivity

Contents

Contents	2
Introduction.....	4
Features.....	4
Applicable Models	5
Specifications.....	5
Electrical Ratings	5
Operating Environment.....	5
Dimensions	5
User Account Overview	6
Safety.....	7
Certifications	8
Compliance	8
Recycling.....	9
Servicing & Repair	9
Additional Documentation	9
Getting Started	10
Receiving Inspection.....	10
Inventory	10
Installation.....	11
Mounting the DC ² Meter.....	11
Connecting the DC ² Meter	11
Installing Current Sensors.....	12
Specifications.....	12
Installation.....	13
Measurement Limits.....	14
Overview.....	15
Front	15
Status LEDs	15
Feed LEDs (2)	15
Quick Configuration.....	16
Using the Display	16
Activating the Display.....	16
Controlling the Display	16
Hot Keys.....	16
Network Settings.....	17
Dynamic IP Address Assignment (DEFAULT)	17

Manual IP Address Assignment	18
Web Interface.....	19
Getting Started	19
Supported Web Browsers	19
Logging in.....	19
Layout	20
Tabs	21
Power.....	21
Environment.....	21
Logging	21
Modules.....	21
Management	21
Settings	22
Network Configuration.....	22
SNMP Configuration.....	23
SNMP Settings	23
Device Settings	24
Thresholds	24
Resetting Measurements	26
Network Time Protocol (NTP)	26
CLI	27
Introduction.....	27
Connecting.....	27
Logging	28
Event.....	28
Management Information Base (MIB)	29
Common OIDs.....	29
Upgrade Firmware.....	31
Obtaining Files.....	31
Troubleshooting	32
Resetting Login Credentials.....	32
Connecting to the Web Interface.....	32
Knowing your DC ² Meter' IP address	32
Support.....	33

Introduction

Features

The DC²Meter, Racktivity's newest addition to its data center power monitoring and management solution can be installed at the DC power distribution board or in distributed remote locations such as PoPs, base stations, and head ends. The unit features a DIN rail mountable design and Ethernet connectivity and supports 12 inputs for current measurements.

Main Features:

- Measure DC voltage
 - On 2 feeds: A and B
 - Input range: 36 - 60 VDC
 - Accuracy: +/- 2%
- Measure DC current
 - On 12 inputs: 6x on Feed A and 6x on Feed B
 - Input range: up to 800A (depends on current sensor used)
 - Accuracy: +/- 2%
- Calculates power (W) and power consumption (kWh) per port
- Works on both + and - input voltage
- 100% galvanic separation between the 2 feeds
- Power supply via A and/or B feed for redundancy

Applicable Models

Unless specified otherwise, all information in this document is applicable to the following Racktivity DC²Meter models:

- DCS12-02

Specifications

Electrical Ratings

Input:

Voltage	36 - 60 VDC
---------	-------------

Operating Environment

Operating temperature	0°C to 50°C	32°F to 122°F
Storage temperature	-10°C to 60°C	14°F to 140°F
Humidity	5% to 85% RH	non-condensing

Dimensions

Dimensions cm (WxHxD)	7.1 x 9 x 5.3
Dimensions inch (WxHxD)	2.8 x 3.54 x 2.1

User Account Overview

The DC²Meter has 3 types (levels) of user accounts: **admin**, **restricted** and **guest**. The following table shows an overview of the functionality of each type:

	admin	restricted	guest
Open website	Yes	Yes	Yes
Open CLI session	Yes	Yes	Yes
View current status (states, data & values)	Yes	Yes	Yes
Edit thresholds	Yes	No	No
Edit port names	Yes	No	No
Change SNMP notification settings	Yes	No	No
Edit device settings	Yes	No	No
View & download logs	Yes	No	No
Default user name	admin	restricted	guest
Default password	1234	1234	1234

The same features and options apply to both the website and the Command Line Interface (CLI). To change the login credentials for the users please refer to the **DEVICE SETTINGS** chapter.

Safety



Save these instructions!

This Safety Information contains important instructions that should be followed during installation and maintenance of the DC²Meter. It is intended for Racktivity customers who set up, install, relocate, or maintain Racktivity equipment. Changes and modifications to this unit not expressly approved by Racktivity could void the warranty.



Electrical Hazard!

Read the following information before installing or operating your DC²Meter:

- Do not work alone under hazardous conditions.
- High current through conductive materials could cause severe burns.
- Follow all local and national codes when installing the DC²Meter.
- To avoid possible electrical shock and equipment damage, use only the supplied hardware.
- The feed connectors serve as the disconnects for the DC²Meter.
- Do not operate your DC²Meter with any covers removed or when it is damaged.
- There are no user serviceable parts inside the DC²Meter. All repairs and service should be performed by authorized service personnel only.
- The DC²Meter is designed for indoor use only in a controlled environment away from excess moisture, temperature extremes, conductive contaminants, dust, direct sunlight or magnetic sources.
- Do not attempt to mount the DC²Meter to an insecure or unstable surface.
- Never attempt to install electrical equipment during a thunderstorm.
- Use of this equipment in life support applications or any medical applications is strictly prohibited since failure of this equipment can reasonably be expected to cause the failure of the life support equipment or to significantly affect its safety.
- **CAUTION:**
The DC²Meter contains a lithium battery and should not be disposed of with general refuse. Dispose of the lithium battery in accordance with all local codes and regulations for products containing lithium batteries. Contact your local environmental control or disposal agency for further details. The battery is not intended to be user replaceable.

Certifications

Not all certifications are applicable to every model. Please check the label on your device.

- **CE / FCC**

This device is designed in compliance with the requirements of the 4 following regulations:

- EN 55022: Class B
- EN 61000-3-2
- EN 61000-3-3
- EN 55024



This device is certified to comply with Part 15 of the FCC rules.

Compliance

- **WEEE**

Waste Electrical and Electronic Equipment

- **RoHS**

Restriction of Hazardous Substances



Recycling



The materials used for shipping the DC²Meter are recyclable, please save them for later use or dispose of them appropriately.

Servicing & Repair

There are no user serviceable parts inside the DC²Meter. All repairs and service should be performed by authorized service personnel only.

Please refer to the Service manual for RMA procedure.

Additional Documentation

Additional documentation regarding the following subjects is available on the Racktivity Support Website <http://www.racktivity.com/support/>.

- API manual, overview & examples
- E²Sensor documentation
- Servicing (RMA) documentation

Getting Started

Receiving Inspection

Inspect the package (see **INVENTORY** section) and contents for shipping damage and make sure that all parts were received. Report any damage immediately to the shipping agent and report missing contents, damage, or other problems immediately to your reseller.

Inventory

Please verify the contents of the box:

Standard Package

Item	Quantity
DC ² Meter	1
Feed connector (2 pins)	2
Quick Start Guide	1

Installation

Mounting the DC²Meter

Mount the DC²Meter to a horizontal DIN rail in your enclosure using the mounting slots at the back of the unit.

- Hold the unit with the top (white) slider over the DIN rail while slightly pulling the unit down.
- Place the bottom (black) slider over the bottom of the DIN rail.

To remove the DC²Meter use a flathead screwdriver to slightly pull the bottom (black) slider down. This will enable you to pull the bottom of the unit forward and release it from the DIN rail.

Connecting the DC²Meter

1. The DC²Meter is powered by either of its Feed connectors (Feed A and Feed B) individually or simultaneously.
2. Attach the supplied feed connector(s) to an existing 36 - 60 VDC power cable by using the screws. The DC²Meter regulates the polarity of the incoming current itself.
3. The POWER LED (blue) adjacent to the connected Feed connectors will become active.

Installing Current Sensors


Specifications

The DC²Meter has been designed to communicate with a wide range of sensors as long as they meet the following criteria:


- Supply voltage: -12V/+12V
- Output voltage: -4V/+4V

Note: The DC²Meter features both a fixed list of predefined sensor models, and a Generic option which requires an additional value (mA/V) to be entered. If you are uncertain that your preferred sensor is compatible with the DC²Meter, please contact **SUPPORT** prior to purchase.

The pin layouts of the sensor connectors on the DC²Meter (left) and current sensors (right):

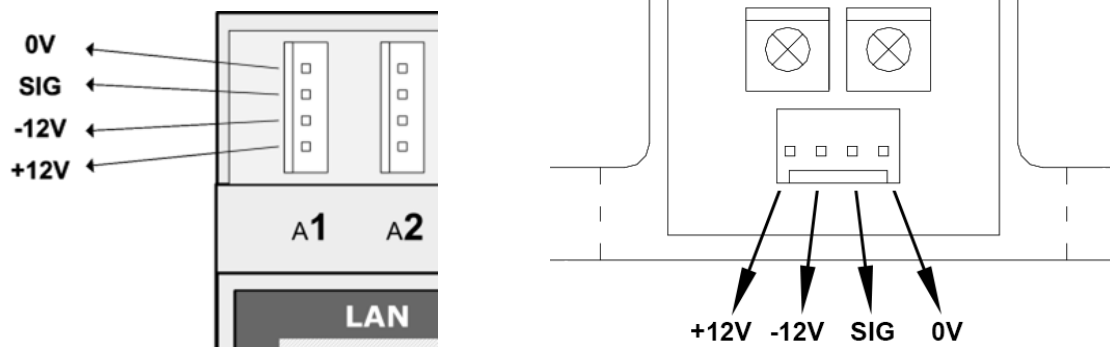

A typical sensor cable will be assembled as follows:

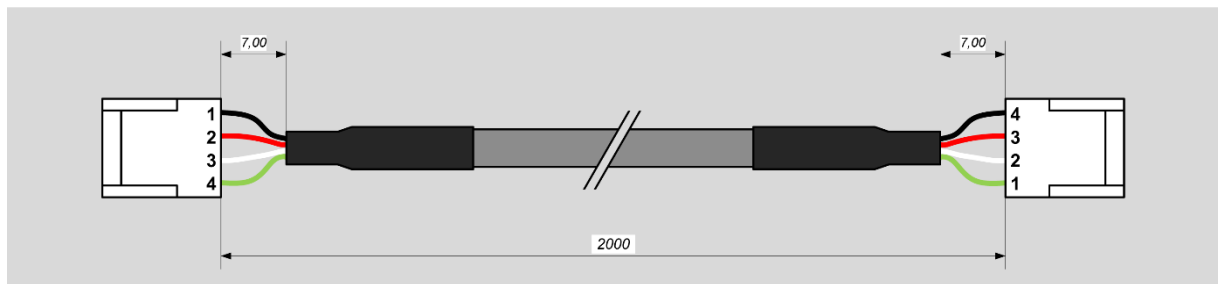

With the following components:

	Reference	Quantity
Connector	Molex 22-01-1042	2
Crimp contacts	Molex 08-50-0032	8
Cable	Belden 8723	1

Installation

The DC²Meter can be installed and operated by connecting only 1 of the available feed connectors. Each set of 6 sensor connectors (A1 - A6 or B1 - B6) is linked to its adjacent feed connector (A Feed or B Feed). Only an incomplete set of power metrics for the sensors of the unconnected feeds will be available. If certain metrics are missing for a specific sensor, please verify that there is an active feed for that sensor.

To install a current sensor:

- Connect the current sensor cable to the current sensor and an available 4 pins connector on the DC²Meter but do not yet attach the sensor to the power cable it will be measuring.
- Open the Settings [1] > Sensors [2] tab on the web portal, select the sensor type for the correct connector [3] and press the save button [4]. If your sensor is not listed in the dropdown selection the please select the 'Generic' option and enter the corresponding value from the table in the **GENERIC SENSORS** chapter.
- Set the zero point by pressing the "Reset zero-point" button [5] for the sensor (this can also be accomplished through the display).
- Connect the current sensor to the power cable that needs to be monitored.
- The DC²Meter display and web portal will now show the correct current values (and power values if the Feed connector for that Feed is attached and powered).

User admin, logged in as Admin (Logout) DC S12-02
r_name - r_pos

Power Environment Logging E² Sensors **Settings**

Device Network SNMP **Sensors** LDAP

Feed A

Transducer A1	Generic	0 mAV	Reset zero-point
Transducer A2	Generic	0 mAV	Reset zero-point
Transducer A3	Generic	0 mAV	Reset zero-point
Transducer A4	Generic	0 mAV	Reset zero-point
Transducer A5	Generic	0 mAV	Reset zero-point
Transducer A6	Generic	0 mAV	Reset zero-point

Feed B

Transducer B1	Generic	0 mAV	Reset zero-point
Transducer B2	Generic	0 mAV	Reset zero-point
Transducer B3	Generic	0 mAV	Reset zero-point
Transducer B4	Generic	0 mAV	Reset zero-point
Transducer B5	Generic	0 mAV	Reset zero-point
Transducer B6	Generic	0 mAV	Reset zero-point

Reset **Save**

Copyright © 2011 Racktivity NV. All rights reserved. Friday, 22 April 2016 12:14 GMT

Measurement Limits

Each current sensor has a bottom and top limit for its measurements. For the DC²Meter the top limit is the Amp rating of the sensor. The bottom limit can be calculated using the formula below. Note that measured values close to the bottom limit may be less accurate than the sensor' listed accuracy. If the measured values regularly exceed the top limit it is advised to change the sensor to one with a higher Amp rating.

$$\text{Bottom value} = [\text{Amp rating}] / 160$$

Example

The RSCTD20-200 current sensor has a rating of 200A. Its bottom limit is:

$$200 / 160 = \mathbf{1.25A}$$

Every measured value between -1.25A and 1.25A will be displayed as 0.


Generic sensors

The following table lists the mA/V value that should be used if your sensor is not listed on the Settings > Sensors tab on the web portal.

AMPERAGE	GENERIC mA/V
50	12500
100	25000
200	50000
300	75000
400	100000
500	125000
600	150000
800	200000
1000	250000
1500	375000
2000	500000

Overview

Front

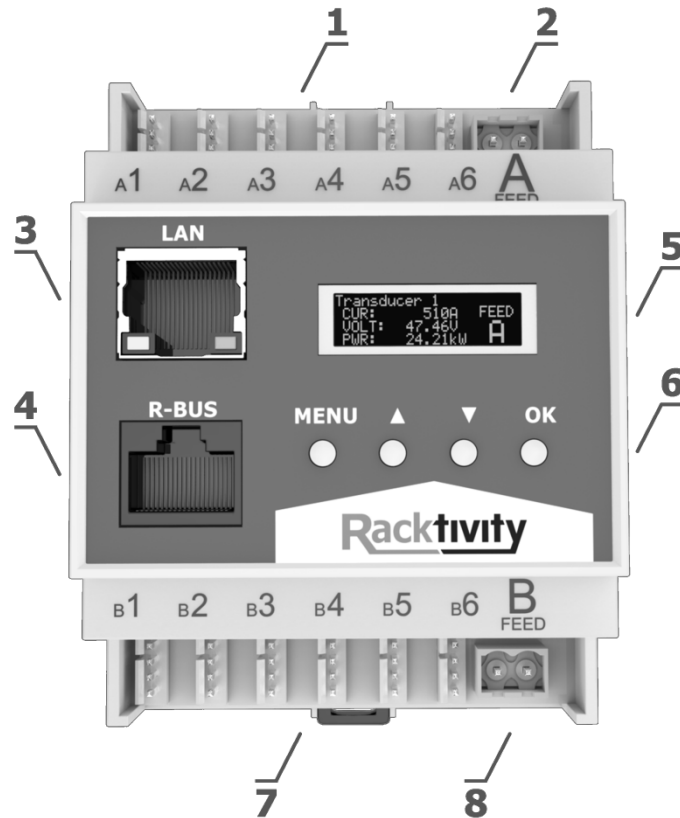

1	A CONN	Current sensor connectors 1 to 6 for Feed A
2	A FEED	Feed A input connector with Feed A power LED
3	LAN	Ethernet connector (with connectivity indicator LEDs)
4	R BUS	RS485 peripheral bus connector (for external modules)
5	OLED	Measurements and settings OLED
6	NAV BUTTONS	Menu, Up, Down and OK navigation buttons
7	B CONN	Current sensor connectors 1 to 6 for Feed B
8	B FEED	Feed B input connector with Feed B power LED

Status LEDs

Feed LEDs (2)

ON	The corresponding feed is powered
OFF	No power is provided to the corresponding feed

Quick Configuration

Using the Display

Activating the Display

When at least one of the Power LEDs is lit and the screen is black, push any of the 4 navigation buttons next to the display to activate it. The OLED standby delay can be set at the Settings page on the Web Interface (the default value is 10 minutes).

Controlling the Display

The display is controlled using the **MENU**, **UP**, **DOWN** and **OK** buttons below the screen. Use the **UP** and **DOWN** buttons to navigate through the reporting screens or through a selection list in the menus. Press **OK** to select the highlighted item and **MENU** to go back.

Hot Keys

Several Hot Key combinations are available by using the navigation buttons below to the display. To activate the functions, press the necessary buttons **simultaneously for 4 seconds** (until the notification is shown on screen).

Hot Key	Buttons	Action
Hot Reset	MENU + DOWN	Reboots the master/controller module, no settings changed
Credential Reset	UP + DOWN	Resets the login credentials to default values
Factory Reset	MENU + OK	Resets all settings to factory defaults (network, SNMP configuration, credentials, etc.).

Note: When the Display Lock setting is enabled these Hot Keys will not be triggered.

Network Settings

There are two methods for setting up the IP address: Dynamic IP address assignment and Manual Assignment. If you are uncertain which method to use, contact your network administrator for assistance before continuing the installation process.

Note: Recent browser versions have started blocking the SSLv3 encryption protocol used by the device when HTTPS is enabled. For this reason HTTPS has been disabled by default. Please make sure your browser allows SSLv3 prior to updating the HTTP(S) setting.

Dynamic IP Address Assignment (DEFAULT)

1. Press the **MENU** button until the MENU appears, select **Network Settings** using the **DOWN** button and press **OK**.
2. Within the **Network Settings** menu, select **DHCP** and press **OK**. When the value DHCP: ON is displayed, the device already has dynamic IP assignment enabled (skip to step 4). If not, use the **UP** or **DOWN** buttons to change the value to DHCP: OFF and press **MENU** or **OK** to confirm.
3. Use the **UP** button to select **Apply Settings** and press **OK**. Press the **MENU** button to cancel or the **OK** button to apply the settings.
4. Press **DOWN** to select **IP Address** and press **OK** to display the current IP address.
5. On a computer in the same network, use a browser to open the assigned IP address, for example <http://192.168.14.250>
6. When surfing to the web portal, a login screen appears. The default user name is **admin** and the default password is **1234**.

Manual IP Address Assignment

1. Obtain the correct IP address, standard gateway, DNS Server IP and subnet mask from your network administrator.
2. Press the **MENU** button until the MENU appears, select **Network Settings** using the **DOWN** button and press **OK**.
3. Within the **Network Settings** menu, select **DHCP** and press **OK**. When the value DHCP: OFF is displayed, the device already has manual IP assignment enabled. If not, use the **UP** or **DOWN** buttons to change the value to DHCP: OFF and press **MENU** or **OK** to confirm.
4. Use the **UP** button to select **IP Address** and press **OK**.
5. Use the **UP** and **DOWN** buttons to change the currently selected value and press **OK** to select the next value. When holding the **UP** and **DOWN** buttons changing the values speeds up. When ready press **MENU** to confirm and return to the **Network Settings** menu.
6. Repeat the last two steps for the **Subnet Mask**, **Standard Gateway** and **DNS Server** settings.
7. Use the **UP** button to select **Apply Settings** and press **OK**. Press the **MENU** button to cancel or the **OK** button to apply the settings.
8. On a computer in the same network, use a browser to open the chosen IP address, for example <http://192.168.14.250>

When surfing to the web portal, a popup appears requesting a username and password. The default username is **admin** and the default password is **1234**

Web Interface

Getting Started

Supported Web Browsers

The following browsers have been tested and certified to work with the ACL Master Web Interface (on most platforms):

- Internet Explorer 11 or higher
- Firefox 26.0 or higher
- Chrome 31.0 or higher

Other available web browsers may work with this device but have not been fully tested by Rackactivity.

Logging in

For instructions on how to set up the TCP/IP settings to connect to the Web Interface, please see the **NETWORK SETTINGS** chapter.


To recover from a lost password, please refer to the **TROUBLESHOOTING** chapter.

Use an internet browser to open the DC²Meter IP address. You will be asked for login credentials, the default values for the **administrator** account are:

User name	admin
Password	1234

To find out everything about the different types of user accounts see the **USER ACCOUNT OVERVIEW** chapter. If you are presented with a warning about the connection being untrusted (self-signed certificate) it can be ignored.

Layout

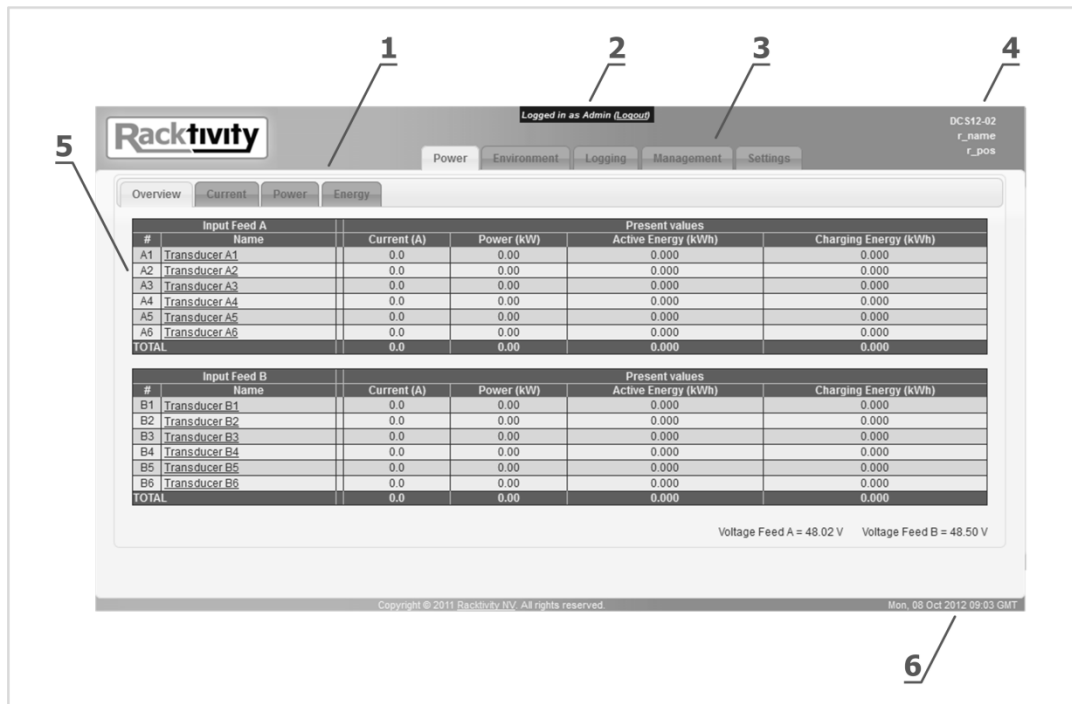

1	Sub tabs	Displays the different sections of the selected main tab
2	User account	Displays which type of User Account is currently logged in
3	Main tabs	Displays the different functions of the DC ² Meter
4	Device info	Displays the device name, rack name & rack location. Can be changed at the settings tab
5	Sensors	Displays the available info for each current sensor of Feed A and Feed B
6	Device time	The time set on the Settings tab (either manual or through an NTP server)

Tabs

Power

Use the Power Tab for the following:

- See the load and general status of both the DC²Meter's individual sensors and the totals:
 - Amps
 - Wattage (only when the corresponding Feed Connector is powered)
 - Active and charging energy (kWh)
 - Voltage for each Feed
- Monitor current sensors
- Configure thresholds for sensors and totals (as applicable)
- Resetting measurements
- Change SNMP notifications for

Environment

Use the Environment Tab to monitor and manage:

- Internal sensors (as applicable)
- Voltage: status, history and management of each Feed

Logging

The logging tab provides access to the **Event** logging. After selecting the desired module and time-range the log can be downloaded or viewed inside the browser.

For more information regarding this subject, please refer to the **LOGGING** chapter.

Modules

Use this tab to control connected E²Sensors.

For more information regarding the Modules tab, please see the E²Sensor documentation.

Note: This tab is only displayed with a connected and managed E²Sensor.

Management

The management tab is used to manage the modules in a DC²Meter setup, including E²Sensors. For more information regarding the managing of E²Sensors, please see the E²Sensor documentation.

Settings

Use this tab to configure the following settings:

- Network
- SNMP
- Telnet
- Device and User Accounts
- NTP (Network Time Protocol)

Network Configuration

Path: Settings > Network Settings

The Network Settings contains both the Network and the SNMP related settings. The SNMP related settings can be found in the **SNMP CONFIGURATION** chapter. The following Network settings are editable:

- **Device IP Address**
 - The IP address of the DC²Meter*
- **Subnet Mask**
 - The subnet mask of the DC²Meter
- **Standard Gateway**
 - The IP address of the default node on the network
- **DNS Server**
 - The IP address of the Domain Name System (DNS) server
- **Enable DHCP**
 - Check to enable DHCP
- **Force secure web access (HTTPS)**
 - Check to force secure HTTPs web access using SSLv3
- **Force secure telnet access (SSL)**
 - Check to force SSL telnet access

* **Note:** When DHCP is enabled, the Network Settings are not necessarily the ones shown here, since they are provided by the DHCP server. Disabling DHCP will force the DC²Meter to use the provided Network Settings.

SNMP Configuration

The DC²Meter offers SNMPv2 communication (GETs, SETs and traps). Notifications (traps) can be enabled or disabled for many of the device's functions:

- Sensor thresholds (current, power, ...)
- Totals thresholds (current, power, ...)
- Temperature thresholds
- Voltage thresholds
- ...

To toggle SNMP for a specific parameter or function, (un)check that parameter's checkbox and press the Save button. The SNMP checkboxes can be found next to most measurements.

SNMP Settings

Path: Settings > Network Settings

The Network Settings contains both the Network and the SNMP related settings. The network related settings can be found in the **NETWORK CONFIGURATION** chapter. The following SNMP settings are editable:

- **SNMP Community read**
The community read string for GET requests
- **SNMP Community write**
The community write string for SET requests
- **SNMP Trap Community string**
Community string used when sending SNMP traps
- **SNMP Trap Receiver port**
The port (1 - 65535) on which traps will be sent
- **SNMP Trap Receiver IP**
IP address of the trap receiver. Up to 3 trap receivers (and ports) can be configured
- **Enable SNMP write protection**
Check this box to disable SNMP write (SET) access to the DC²Meter completely
- **Enable SNMP Traps for device**
The DC²Meter will not send any traps when unchecked, regardless of individual settings
- **Use ECS authentication**
Toggles the use of an external authentication server
- **ECS Authentication server IP**
The IP address of the authentication server
- **ECS Authentication server port**
The port (1 - 65535) of the authentication server on which the connection will be made

Device Settings

The Device Settings give access to

- DC²Meter identification
 - **Device name:** the name of the DC²Meter
 - **Rack name:** the name of the rack where the DC²Meter is located
 - **Rack position:** the identifier of the position in the rack
- User account settings (see the **USER ACCOUNT OVERVIEW** chapter)
 - **Admin**
 - **Restricted user**
 - **Guest**
- TFT settings
 - **TFT timeout:** the idle time in minutes after which the TFT goes into standby
 - **TFT display lock:** when checked the TFT (and buttons) cannot be used to change settings. All changes must be made through the website.
- Temperature
 - **Temperature unit:** degrees Celsius (°C) or Fahrenheit (°F)
- Date & Time Settings (see the **NETWORK TIME PROTOCOL (NTP)** chapter)
 - **Date & Time Settings:** The real-time clock dialog features several options. Uncheck the *Use NTP* checkbox to be able to set a custom date & time. Uncheck the *Use default NTP* checkbox to not use an NTP server from pool.ntp.org and enter the custom IP address into the *NTP address* field.
Note: Making changes to the date/time settings might clear all logged data!

Thresholds

Thresholds can be configured and used so that you are notified through SNMP at certain events. Many of the DC²Meter's parameters have settable thresholds. To configure a specific threshold, open the tab where the appropriate parameter is shown.

Threshold (kW)		
Warning minimum	Warning maximum	SNMP Warning
<input type="text" value="-18.00"/>	<input type="text" value="54.00"/>	<input checked="" type="checkbox"/>
<input type="text" value="-18.00"/>	<input type="text" value="54.00"/>	<input checked="" type="checkbox"/>

At least the following parameters have one or more settable thresholds:

- **Amperage**
 - path: Power > Current
- **Wattage**
 - path: Power > Power
- **Voltage**
 - path: Environment > Voltage
- **Ambient**
 - path: Environment > Ambient
- **External modules**
 - path: Environment > External Modules

Depending on the parameter one or more of the following types of thresholds will be available:

- **Warning:** When the measurement crosses this value an SNMP notification is sent
- **Low:** When the measurement goes below this value an SNMP notification is sent
- **High:** When the measurement goes above this value an SNMP notification is sent

To change a threshold enter the desired value into the appropriate input area and press the Save button. If the background of the input area turns red an incorrect value has been entered.

Note: Most thresholds have corresponding SNMP checkboxes that enable/disable the notification. Please ensure both the threshold **and** the appropriate SNMP notifications are set correctly.

Resetting Measurements

For many parameters the minimum, maximum and/or total is saved to give an easy overview of load activity. These values can be easily reset by pressing the Reset link for that value.

Input Feed B		Current (A)			
#	Name	Min	Now	Max	Min/max Reset
B1	Transducer.B1	0.0	0.0	0.0	Reset
B2	Transducer.B2	0.0	0.0	0.0	Reset

The following parameters have resettable values:

- **Individual & total amperage**
 - path: Power > Current
- **Individual & total wattage**
 - path: Power > Power
- **Individual & total active and charging energy (kWh)**
 - **Note:** The **Accumulated kWh** counter is not resettable!
 - path: Power > Energy
- **Temperature**
 - path: Environment > Ambient
- **Voltage**
 - path: Environment > Electrical

Note: Clicking a Reset link in the column header will reset all values in that column, except for the value in the Total row.

Network Time Protocol (NTP)

Path: Settings > Device Settings

The Network Time Protocol (NTP) is a protocol for synchronizing the clocks of computer systems over networks. The DC²Meter is equipped with an onboard clock that can be setup to sync with:

- pool.ntp.org (default)
- a custom NTP server
- date & time picker

For more information regarding the configuration of the onboard clock please refer to the **DEVICE SETTINGS** chapter.

CLI

Introduction

The DC²Meter has a built in Command Line Interface that can be accessed through Telnet. Commands are typically sent to the separate modules. A DC²Meter consists of exactly 1 Master module and 1 optional E²Sensor module. Each module is of a specific type: 'M' for master module, 'A' for sensor module. The Master will always have address M1, sensor modules can have addresses A1, A2, A3,

Connecting

Connect to the device IP on port 23. Please note that only Telnet over SSL is enabled by default and requires an SSL capable Telnet client. This can be changed at the Settings tab

Once connected, you will be presented with a log-in screen. Use the admin credentials to gain full access. From here it is possible to access the majority of the DC²Meter's functions. Enter "HELP" for more information.

Logging

The DC²Meter features an Event logging memory that can be downloaded from the Web Interface or through the API for your convenience.

Event

Path: Logging > Event

The Event log is used to keep a history of all important events. Fill in the available fields and view the log in your browser or download it for offline use.

- **Module**
The module for which to request the Event log.
- **Start time**
The starting date & time for the log.
- **End time**
The ending date & time for the log.
- **Download**
Download the log as a text file.
- **Show**
View the log in your browser.

The Log is displayed as a table with the following columns (from left to right):

- **Timestamp**
The timestamp of the event.
- **Event type**
The type of event: outlet toggle, threshold violation, ...
- **GUID**
The GUID of the control. For more info regarding GUIDs please refer to the *ES Series - API Manual*.
- **Value**
The value that was returned by the event (voltage, temperature, etc)

Management Information Base (MIB)

A **management information base (MIB)** is a virtual database used for managing the entities in a communications network and is most often associated with the Simple Network Management Protocol (SNMP). The DC²Meter features a built-in mib file which can be found at the following locations:

- By browsing to [http://\[DEVICE_IP\]/ES-RACKTIVITY-MIB.txt](http://[DEVICE_IP]/ES-RACKTIVITY-MIB.txt)
 - with [DEVICE_IP] the IP of your DC²Meter
- By clicking the "Download MIB file" link on the Settings > Network Settings tab on the web portal

Use this file to translate the OIDs (Object IDentifiers) to a more human-readable state. For more information on how to use the MIB file, please refer to the documentation of your network monitoring software.

Common OIDs

The following table shows some frequently used OIDs for your device to allow for easy integration into your SNMP monitoring software.

Description	MIB Name	Type	OID	Unit
Actual Current A1	mHighCurrent.1.0	Integer	.1.3.6.1.4.1.34097.9.77.1.1.41.1.0	0.1A
Actual Current A2	mHighCurrent.1.1	Integer	.1.3.6.1.4.1.34097.9.77.1.1.41.1.1	0.1A
Actual Current A3	mHighCurrent.1.2	Integer	.1.3.6.1.4.1.34097.9.77.1.1.41.1.2	0.1A
Actual Current A4	mHighCurrent.1.3	Integer	.1.3.6.1.4.1.34097.9.77.1.1.41.1.3	0.1A
Actual Current A5	mHighCurrent.1.4	Integer	.1.3.6.1.4.1.34097.9.77.1.1.41.1.4	0.1A
Actual Current A6	mHighCurrent.1.5	Integer	.1.3.6.1.4.1.34097.9.77.1.1.41.1.5	0.1A
Actual Current B1	mHighCurrent.1.6	Integer	.1.3.6.1.4.1.34097.9.77.1.1.41.1.6	0.1A
Actual Current B2	mHighCurrent.1.7	Integer	.1.3.6.1.4.1.34097.9.77.1.1.41.1.7	0.1A
Actual Current B3	mHighCurrent.1.8	Integer	.1.3.6.1.4.1.34097.9.77.1.1.41.1.8	0.1A
Actual Current B4	mHighCurrent.1.9	Integer	.1.3.6.1.4.1.34097.9.77.1.1.41.1.9	0.1A
Actual Current B5	mHighCurrent.1.10	Integer	.1.3.6.1.4.1.34097.9.77.1.1.41.1.10	0.1A
Actual Current B6	mHighCurrent.1.11	Integer	.1.3.6.1.4.1.34097.9.77.1.1.41.1.11	0.1A
Actual Voltage A Feed	mVoltage.1.0	Gauge	.1.3.6.1.4.1.34097.9.77.1.1.4.1.0	0.01V
Actual Voltage B Feed	mVoltage.1.1	Gauge	.1.3.6.1.4.1.34097.9.77.1.1.4.1.1	0.01V
Actual Power A1	mHighPower.1.0	Integer	.1.3.6.1.4.1.34097.9.77.1.1.43.1.0	0.01kW
Actual Power A2	mHighPower.1.1	Integer	.1.3.6.1.4.1.34097.9.77.1.1.43.1.1	0.01kW
Actual Power A3	mHighPower.1.2	Integer	.1.3.6.1.4.1.34097.9.77.1.1.43.1.2	0.01kW
Actual Power A4	mHighPower.1.3	Integer	.1.3.6.1.4.1.34097.9.77.1.1.43.1.3	0.01kW
Actual Power A5	mHighPower.1.4	Integer	.1.3.6.1.4.1.34097.9.77.1.1.43.1.4	0.01kW
Actual Power A6	mHighPower.1.5	Integer	.1.3.6.1.4.1.34097.9.77.1.1.43.1.5	0.01kW
Actual Power B1	mHighPower.1.6	Integer	.1.3.6.1.4.1.34097.9.77.1.1.43.1.6	0.01kW
Actual Power B2	mHighPower.1.7	Integer	.1.3.6.1.4.1.34097.9.77.1.1.43.1.7	0.01kW
Actual Power B3	mHighPower.1.8	Integer	.1.3.6.1.4.1.34097.9.77.1.1.43.1.8	0.01kW

Actual Power B4	mHighPower.1.9	Integer	.1.3.6.1.4.1.34097.9.77.1.1.43.1.9	0.01kW
Actual Power B5	mHighPower.1.10	Integer	.1.3.6.1.4.1.34097.9.77.1.1.43.1.10	0.01kW
Actual Power B6	mHighPower.1.11	Integer	.1.3.6.1.4.1.34097.9.77.1.1.43.1.11	0.01kW
Active Energy Resettable A1	mPositiveEnergy.1.0	Gauge	.1.3.6.1.4.1.34097.9.77.1.1.46.1.0	0.001kWh
Active Energy Resettable A2	mPositiveEnergy.1.1	Gauge	.1.3.6.1.4.1.34097.9.77.1.1.46.1.1	0.001kWh
Active Energy Resettable A3	mPositiveEnergy.1.2	Gauge	.1.3.6.1.4.1.34097.9.77.1.1.46.1.2	0.001kWh
Active Energy Resettable A4	mPositiveEnergy.1.3	Gauge	.1.3.6.1.4.1.34097.9.77.1.1.46.1.3	0.001kWh
Active Energy Resettable A5	mPositiveEnergy.1.4	Gauge	.1.3.6.1.4.1.34097.9.77.1.1.46.1.4	0.001kWh
Active Energy Resettable A6	mPositiveEnergy.1.5	Gauge	.1.3.6.1.4.1.34097.9.77.1.1.46.1.5	0.001kWh
Active Energy Resettable B1	mPositiveEnergy.1.6	Gauge	.1.3.6.1.4.1.34097.9.77.1.1.46.1.6	0.001kWh
Active Energy Resettable B2	mPositiveEnergy.1.7	Gauge	.1.3.6.1.4.1.34097.9.77.1.1.46.1.7	0.001kWh
Active Energy Resettable B3	mPositiveEnergy.1.8	Gauge	.1.3.6.1.4.1.34097.9.77.1.1.46.1.8	0.001kWh
Active Energy Resettable B4	mPositiveEnergy.1.9	Gauge	.1.3.6.1.4.1.34097.9.77.1.1.46.1.9	0.001kWh
Active Energy Resettable B5	mPositiveEnergy.1.10	Gauge	.1.3.6.1.4.1.34097.9.77.1.1.46.1.10	0.001kWh
Active Energy Resettable B6	mPositiveEnergy.1.11	Gauge	.1.3.6.1.4.1.34097.9.77.1.1.46.1.11	0.001kWh
Charging Energy Resettable A1	mNegativeEnergy.1.0	Gauge	.1.3.6.1.4.1.34097.9.77.1.1.47.1.0	0.001kWh
Charging Energy Resettable A2	mNegativeEnergy.1.1	Gauge	.1.3.6.1.4.1.34097.9.77.1.1.47.1.1	0.001kWh
Charging Energy Resettable A3	mNegativeEnergy.1.2	Gauge	.1.3.6.1.4.1.34097.9.77.1.1.47.1.2	0.001kWh
Charging Energy Resettable A4	mNegativeEnergy.1.3	Gauge	.1.3.6.1.4.1.34097.9.77.1.1.47.1.3	0.001kWh
Charging Energy Resettable A5	mNegativeEnergy.1.4	Gauge	.1.3.6.1.4.1.34097.9.77.1.1.47.1.4	0.001kWh
Charging Energy Resettable A6	mNegativeEnergy.1.5	Gauge	.1.3.6.1.4.1.34097.9.77.1.1.47.1.5	0.001kWh
Charging Energy Resettable B1	mNegativeEnergy.1.6	Gauge	.1.3.6.1.4.1.34097.9.77.1.1.47.1.6	0.001kWh
Charging Energy Resettable B2	mNegativeEnergy.1.7	Gauge	.1.3.6.1.4.1.34097.9.77.1.1.47.1.7	0.001kWh
Charging Energy Resettable B3	mNegativeEnergy.1.8	Gauge	.1.3.6.1.4.1.34097.9.77.1.1.47.1.8	0.001kWh
Charging Energy Resettable B4	mNegativeEnergy.1.9	Gauge	.1.3.6.1.4.1.34097.9.77.1.1.47.1.9	0.001kWh
Charging Energy Resettable B5	mNegativeEnergy.1.10	Gauge	.1.3.6.1.4.1.34097.9.77.1.1.47.1.10	0.001kWh
Charging Energy Resettable B6	mNegativeEnergy.1.11	Gauge	.1.3.6.1.4.1.34097.9.77.1.1.47.1.11	0.001kWh

Upgrade Firmware

Rackivity is always working on improving and fine-tuning its products. It is possible that a new firmware is available for your device. During a firmware update the device continues working as normal.

Note: Make sure all active connections to the DC²Meter - such as the website, telnet and SNMP - **are closed before updating**. Open connections might result in a failed update!

Obtaining Files

If you are unsure whether a firmware update is available for your device, have a look at <http://www.rackivity.com/support> or contact Rackivity Support (see **SUPPORT** chapter). If applicable the necessary files and instructions will be provided.

Troubleshooting

Resetting Login Credentials

In case of lost login credentials, resetting them can be done on the device itself:

- Press and hold the **UP** and **DOWN** buttons simultaneously for 3 seconds until a notification is shown on the display.
The credentials will now be reset to their default settings:

Default login credentials	
User name	admin
Password	1234

Connecting to the Web Interface

If you are unable to connect to the Web Interface please try one or more of the following options:

- Ping the device on its IP address. When unsuccessful, the DC²Meter is most likely not on the same network as your PC, or communication is blocked by a network device.
- Connect the DC²Meter directly to your computer (please note that for this both devices need to have a valid fixed IP).
- Try opening the Web Interface with another browser.
- Connect to the DC²Meter using a different computer.
- If possible, power cycle the DC²Meter.

Knowing your DC²Meter' IP address

If you want to easily find out the IP address of your DC²Meter, use the navigational buttons next to the TFT on the front.

- If the TFT is black, press any button once to activate it.
- Press MENU to enter the Menu.
- Select Network Settings and press OK.
- Press the DOWN button, select IP Address and press OK.
- The IP address of your DC²Meter is displayed.

Support

Feel free to contact us if you need any support or have any other questions or remarks:

Online www.rackactivity.com/support

E-mail support@rackactivity.com

Phone 003293242095 (GMT+1)